

Qualification Unit

This unit forms part of a regulated qualification.

Unit Title: Use Equipment to Move Goods in Explosive Substances and Articles Operations

Unit Reference Number: T/650/2660

Level: Two (2)

Credit Value: Three (3)

Minimum Guided Learning Hours: 18

| Learning Outcome (The Learner will): | Assessment Criterion (The Learner can): |
|---|--|
| 1. Understand how to use equipment to move goods in Explosives Substances and Articles (ESA) operations | 1.1 Explain the relevant organisational policies and procedures for using equipment in ESA operations that relate to: <ul style="list-style-type: none"> a) Health, safety and security requirements b) Environmental factors c) Special requirements d) Personal Protective Equipment e) Operating requirements f) Hazards g) Loss and damage to goods |
| | 1.2 Describe the characteristics of the different types of goods to be moved |
| | 1.3 Describe different types of equipment that can be used for moving and transferring goods |
| | 1.4 Describe methods for lifting, moving and setting down different types of goods |
| | 1.5 Explain how equipment is used |
| | 1.6 Explain the importance of positioning goods in a suitable way for future use |
| | 1.7 Identify a minimum of 4 problems that can occur when using the equipment |
| | 1.8 Explain appropriate action when dealing with identified problems |

| | | |
|---|-----|--|
| 2. Be able to move and handle the goods in ESA operations | 2.1 | Identify goods to be moved and handled |
| | 2.2 | Use suitable handling methods to move goods safely and correctly |
| | 2.3 | Position and set down goods in the required location |
| | 2.4 | Place goods so that they can be easily identified and accessed |

| ESA NOS Number | Title |
|----------------|--|
| ESA 4.5 | Move materials within the explosives process |
| ESA 7.17 | Operate specialised plant and machinery to performance requirements for explosive substances and/or articles |
| ESA 7.18 | Lift, transfer and position explosive substances and/or articles |
| ESA 8.4.1 | Prepare the vehicle for loading |
| ESA 8.4.2 | Load the vehicle |
| ESA 8.6.2 | Assist in the unloading of the vehicle |